

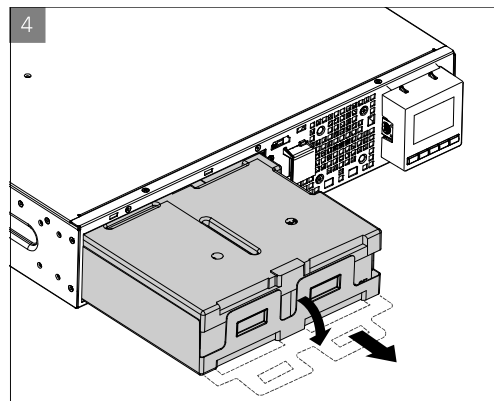
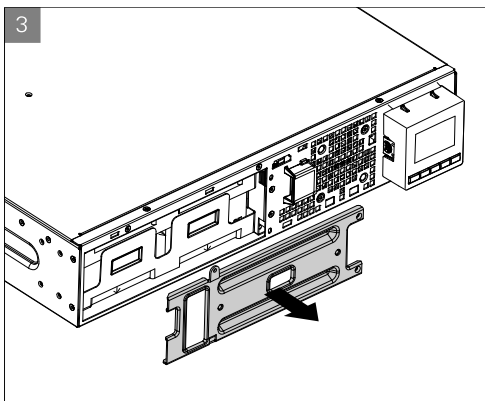
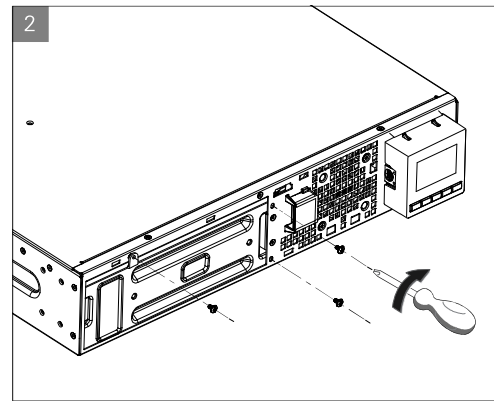


## Replacing the internal battery (For R models)

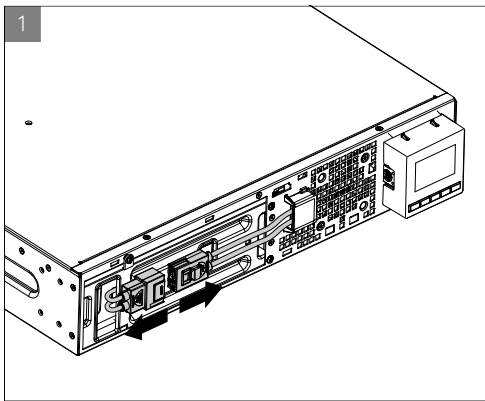

### Installing the new Battery pack

1. Put the new battery pack into the UPS.
2. Screw back the metal protection covers.
3. Reconnect the electrical connector and the front panel.
4. Perform a manual battery test from the display.

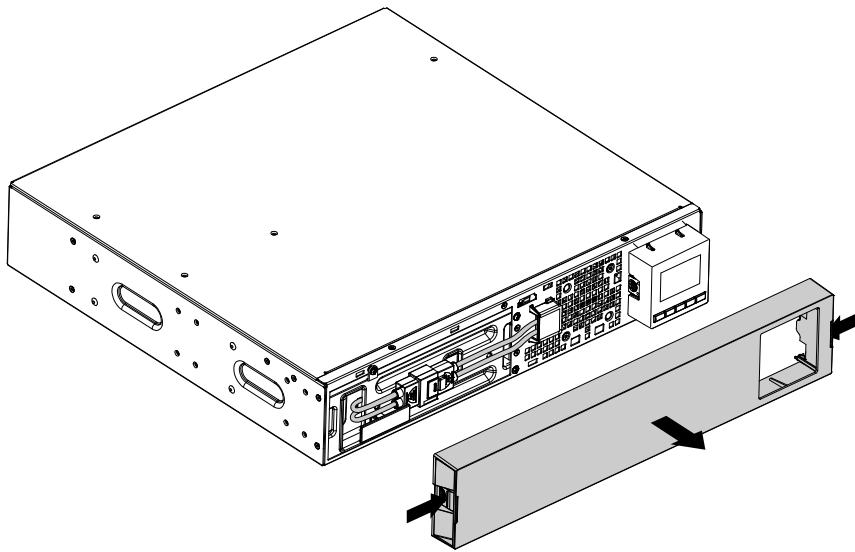

Verify that the replacement batteries have the same rating and brand as the batteries being replaced.